


# Assembly Manual on Lattice Walls



1. If you ordered one lattice wall that goes underneath header, the post base will have a slot cut out. Put the base where the wall goes.

2. If you ordered two walls going catty-corner from each other, you will have two sides cut with a small piece for the inside corner.

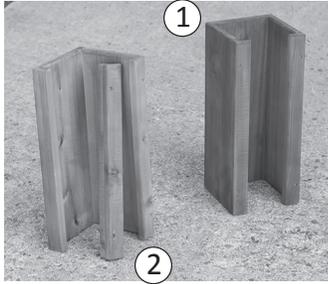

3. Lattice going under header, just push it up between header.



4. Lattice going under 2x6 runner, there will be a notch on one side. Put that side against post.




5. Fasten wall to post with three 2½" screws. Once one wall is installed, put 4x4 post in. Fasten post to lattice wall with three 2½" screws.



6. Fasten black L bracket to bottom of post with five 2½" screws.



7. Drill a hole with ½" masonry bit going down about ½" farther than length of anchor bolt. Install the wedge anchor the same way you installed the others.

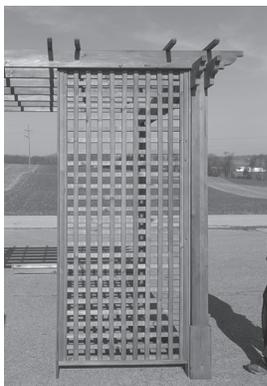

8. Continue with these steps until done.